



HD9240/30
HD9240/31
HD9240/32
HD9240/33
HD9240/34
HD9240/35
HD9240/36

Philips Consumer Lifestyle

Version: A

Service Manual

PRODUCT INFORMATION

- This product meets requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

OPTIONAL (Accessories)

- Baking dish 4222 459 52761

Specifications Airfryer XL with Rapid Air technology
Low fat fryer Multicooker 1.2kg, White

Design and finishing

- Color(s): Star White
- Materials: Plastic

General specifications

- Patented Rapid Air Technology
- Digital Touch-Screen Interface: 60-minute timer,
Integrated Power-on light
On/Off switch
Preset cooking function
Time and temperature control
- Ready signal
- Cord storage
- Non-slip feet
- Automatic shut-off

Weight and dimensions

- Product dimensions (W x H x D) : 315 x 302 x 423 mm
- Weight appliance : 7.0 kg

TECHNICAL INFORMATION

- Frequency : 50/60 Hz
- Power Global : 2100 W
- Voltage Global : 220-230 V
- Cord length : 0.8 meter
- Materials : Outer skin : Plastic (PP)
: Pan : Aluminized steel
: Basket : Aluminized steel
: Basket mesh : Stainless steel
: Coating : PTFE coating
- Capacity : 2.2 liter (1,2 kg)
(till max indicator)
- Coloursetting : white/black
- Temperature : 80 till 200 °C
- Fuse cut-o temp. Motor : 145 °C
TCO : 190 °C

TECHNICAL INFORMATIONS



HD9240/30
HD9240/31
HD9240/32
HD9240/33
HD9240/34
HD9240/35
HD9240/36

	Voltage	Frequency
WEU, EEU, SEU, Nordic, TR	220 - 240V	50 Hz
UK, DB, SGP, HK, MY, IN, TH, AU, NZ, ZA	220 - 240V	50 Hz
AR	220V	50 Hz
CN	220V	50 Hz
TW	110V	60 Hz
SA, KR	220V	60 Hz

Electrical circuit

When the appliance does not work, check the electrical circuit.

Open the lid panel always on the underside. Always replace this panel in case of damaged, scratches body or broken click connection.

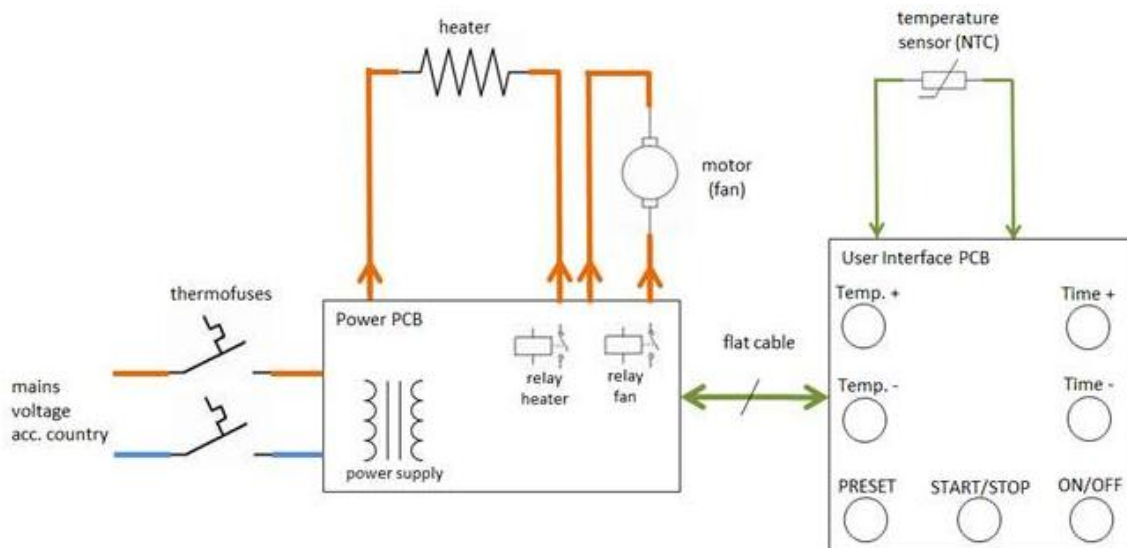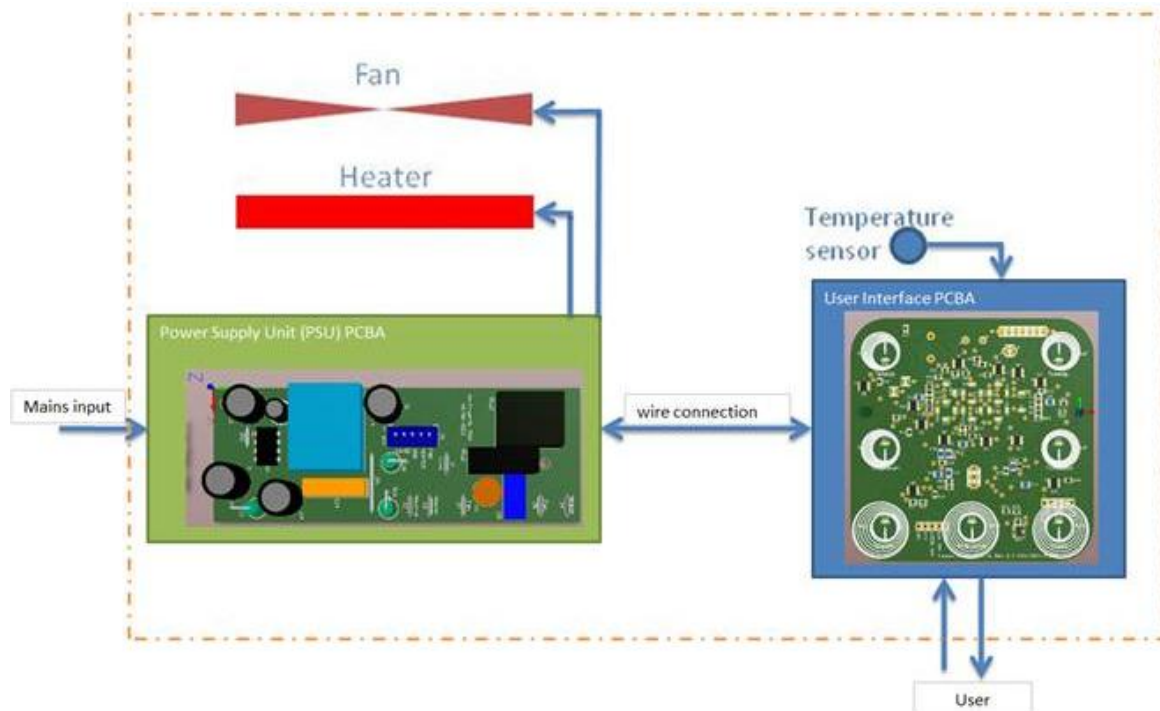

PARTSLISTS

HD9240/30
HD9240/31
HD9240/32
HD9240/33
HD9240/34
HD9240/35
HD9240/36

Pos	Service code	Description
1	4203 036 03161	Top cover main black
2	4203 036 03171	Housing top
3	4203 036 03181	LCD Unit complete
	4203 036 03951	LCD unit US
4	4203 036 03191	UI front printed
5	4203 036 03201	UI diffuser
6	4203 036 03211	UI PCB assy
	4203 036 03961	UI PCB assy US
7	4203 036 03221	UI light seperator
8	4203 036 03231	UI back
9	4203 036 03241	Basket assy
10	4203 036 03251	Pan assy
11	4203 036 03261	Drawer assy white
12	4203 036 03271	Chassis bottom / side assy
13	4203 036 03281	Housing/Bottom (incl. Studs)
14	4203 036 03291	Cable storage white
15	4203 036 03301	Heat shield
16	4203 036 03311	Cooking fan assy
17	4203 036 03321	Fan cooling incl. Ring, adapter
18	4203 036 03331	Cooling air cover assy
19	4203 036 03341	Chassis top assy
20	4203 036 03351	Pan sealing
21	4203 036 03361	Heater assy + reflector 230V/2000 W
	4203 036 03531	Heater assy + reflector 220V/2000 W
	4203 036 03541	Heater assy + reflector 127V/1900 W
	4203 036 03551	Heater assy + reflector 120V/1700 W
	4203 036 03561	Heater assy + reflector 110V/1550 W
	4203 036 03571	Heater assy + reflector 100V/1400 W
22	4203 036 03371	Power supply PCB assy
23	4203 036 03391	Power PCB frame
24	4203 036 03401	Motor 230V/50 Hz
	4203 036 03411	Motor 250V/60 Hz
	4203 036 03421	Motor 110V/60Hz
	4203 036 03581	Motor 127V/60Hz
	4203 036 03591	Motor 220V/50Hz (CN)
	4203 036 03601	Motor 120V/60Hz
	4203 036 03611	Motor 100V/650-60Hz
25	4203 036 03431	Exhaust black
26	4203 036 03441	Powercord EU
	4203 036 03451	Powercord UK/DB
	4203 036 03461	Powercord CN
	4203 036 03471	Powercord AU
	4203 036 03481	Powercord TW
	4203 036 03621	Powercord ID
	4203 036 03631	Powercord AR
	4203 036 03641	Powercord CH
	4203 036 03651	Powercord SA
	4203 036 03661	Powercord SG (export)
	4203 036 03671	Powercord KR
	4203 036 03681	Powercord BR (HV)
	4203 036 03691	Powercord SG/MY/HK
	4203 036 03701	Powercord TH
	4203 036 03711	Powercord US
	4203 036 03721	Powercord JP
	4203 036 03731	Powercord BR (LV)

EXPLODED VIEW

HD9240/30
HD9240/31
HD9240/32
HD9240/33
HD9240/34
HD9240/35
HD9240/36

LCD unit



1



2


3



4



5

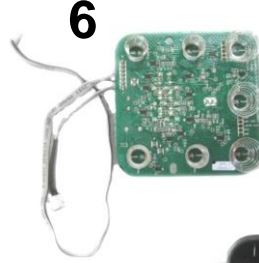

6



7



8

12




9



10



13

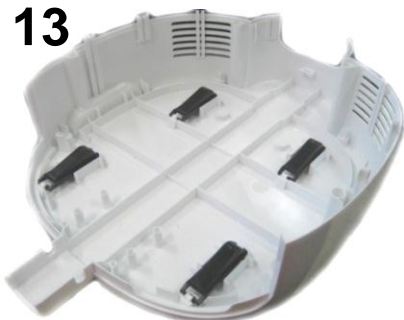

11



14
(CRP)



EXPLODED VIEW

HD9240/30
HD9240/31
HD9240/32
HD9240/33
HD9240/34
HD9240/35
HD9240/36

15



20



16



21



17



22



23



18




24



25



19

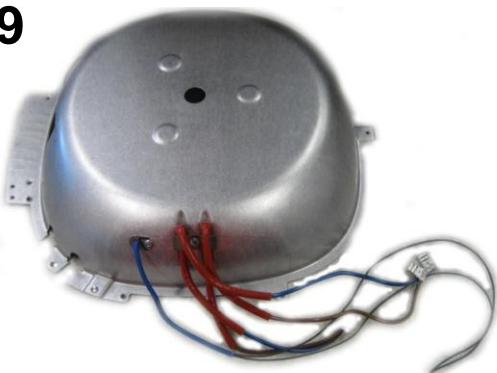

26



DISSASSEMBLY ADVICE


HD9240/30
HD9240/31
HD9240/32
HD9240/33
HD9240/34
HD9240/35
HD9240/36

A. Top cover removal

1. open the 4 screws on the bottom
2. remove the housing



3. remove both wires

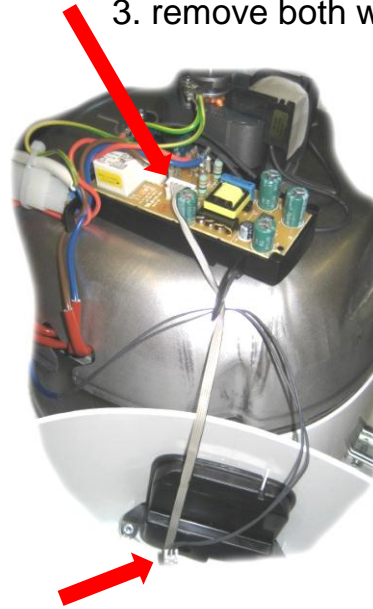



B. LCD window removal

1. remove both screws
2. Dissassemble all 5 LCD parts



C. Powercord removal

1. Cut this cable

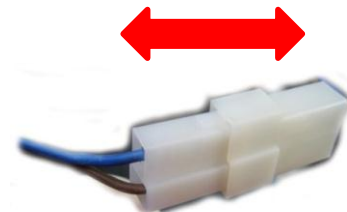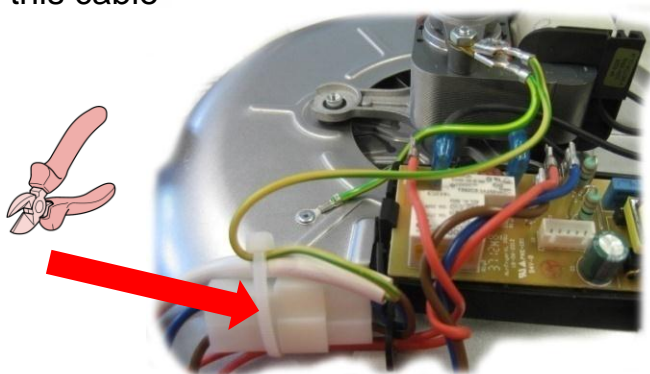


DISSASSEMBLY ADVICE

HD9240/30
HD9240/31
HD9240/32
HD9240/33
HD9240/34
HD9240/35
HD9240/36


D. Heating element removal

1. remove the crimps from the PCB part

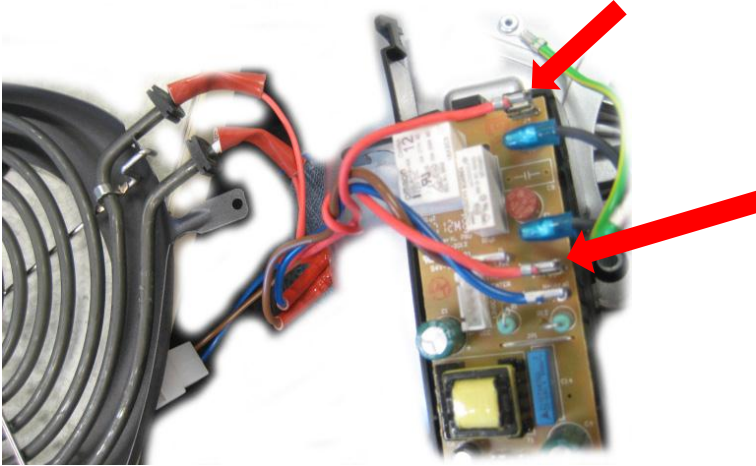

E. PCB removal

1. open the hook and remove all crimps

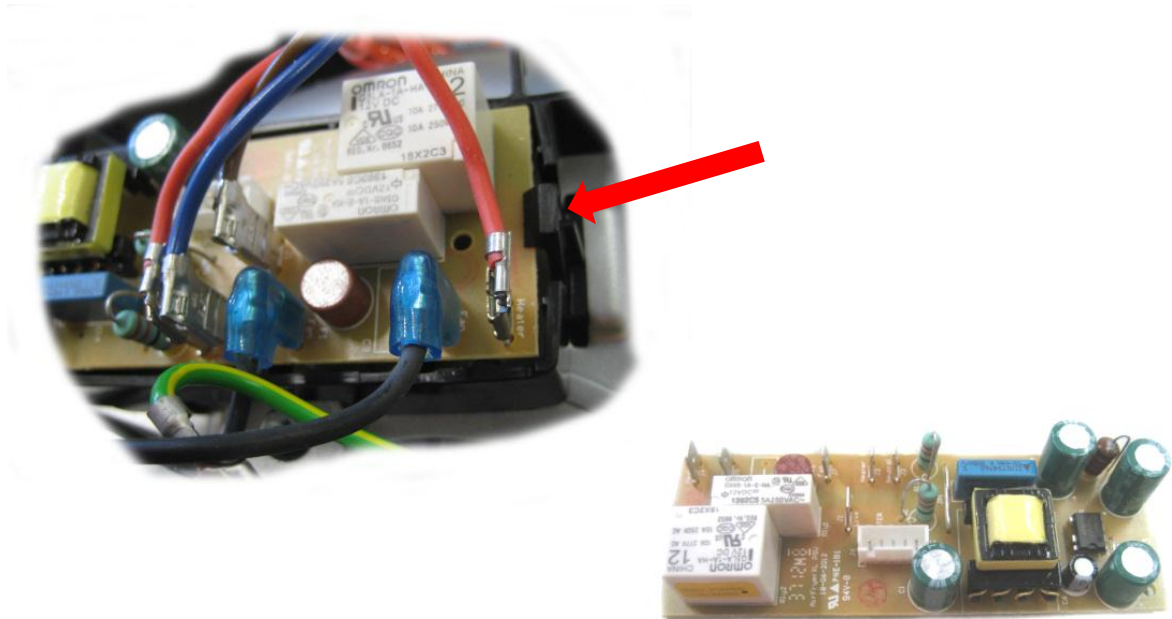

DISSASSEMBLY ADVICE


HD9240/30
HD9240/31
HD9240/32
HD9240/33
HD9240/34
HD9240/35
HD9240/36

F. Motor/ventilator removal

1. turn the screw into the right side, hold the ventilator



2. turn the screw into the right side

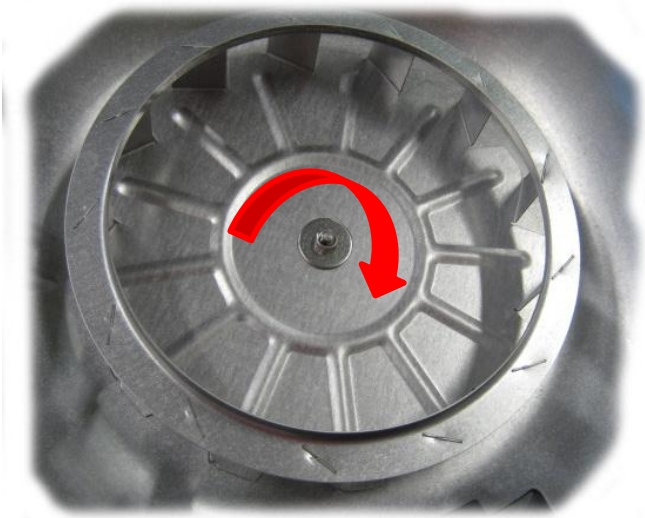

DISSASSEMBLY ADVICE

HD9240/30
HD9240/31
HD9240/32
HD9240/33
HD9240/34
HD9240/35
HD9240/36

G. Basket holder removal

1. open the 2 screws
remove the basket holder



H. Bottom/Heating shield removal

1. open all 4 screws

